

CHAIR ASSEMBLY INSTRUCTION


Step 3

Attach right chair arm (U) to chair seat (R) and chair back rest (S) with two round head screws M6×15 (BB) and a round head screw (AA), using hexagon socket wrench (CC) as Fig.3.

Hardware Used

Item	Discription	Qty	Picture
AA	Round Head Screw M6 x 30	1	
BB	Round Head Screw M6 x15	2	
CC	Hexagon Socket Wrench	1	

Fig.3

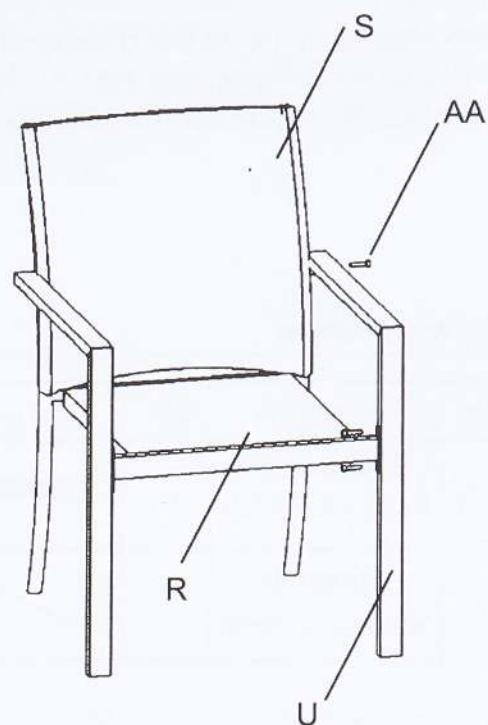


CHAIR ASSEMBLY INSTRUCTION

Step1

Attach chair seat (R) to the chairbackrest (S) with two round head screws M6×30 (AA), using hexagon socket wrench (CC) as Fig.1.

Hardware Used

Item	Discription	Qty	Picture
AA	Round Head Screw M6 x 30	2	
CC	Hexagon Socket Wrench	1	

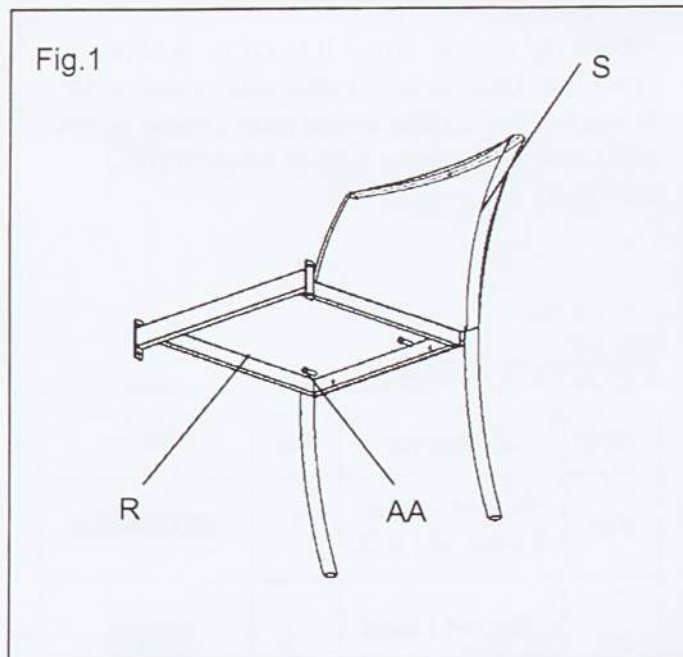


Step 2


Attach left chair arm (T) to chair seat (R) and chair back rest (S) with two round head screws M6×15 (BB) and a round head screw (AA), using hexagon socket wrench as fig.2.

Hardware Used

Item	Discription	Qty	Picture
AA	Round Head Screw M6 x 30	1	
BB	Round Head Screw M6 x 15	2	
CC	Hexagon Socket Wrench	1	

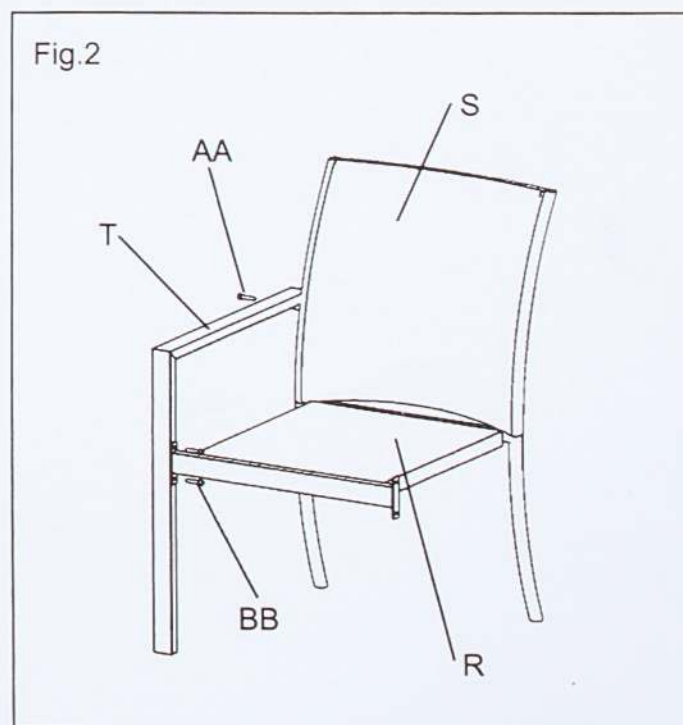


TOOLS AND PARTS

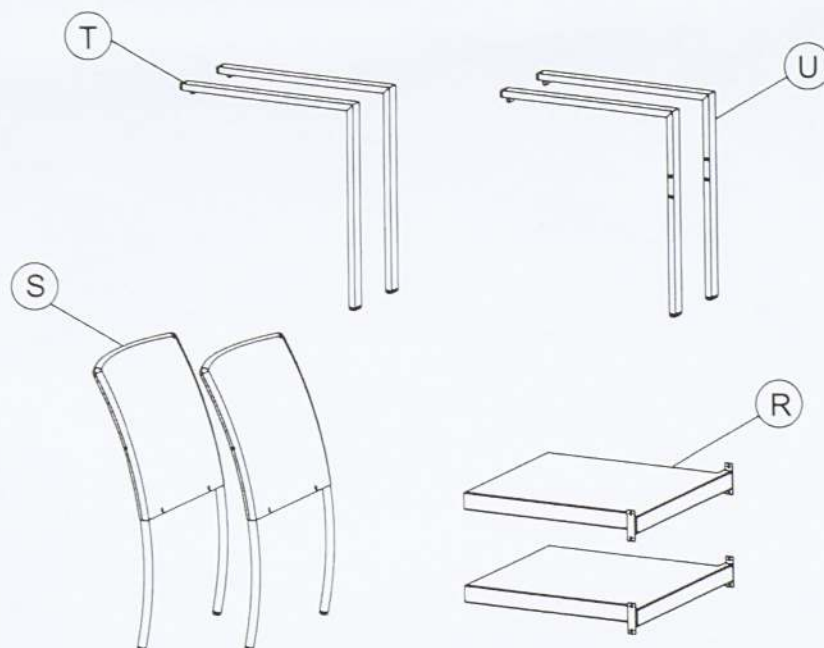

Item	Discription	Picture	Qty
R	Chair Seat		2
S	Chair Back Rest		2
T	Left Chair Arm		2
U	Right Chair Arm		2

HARDWARE CONTENTS

Item	Discription	Picture	Qty
AA	Round Head Screw M6 x 30		8
BB	Round Head Screw M6 x 15		8
CC	Hexagon Socket Wrench		1